



P/N 900607-00 Rev. D 12/2018

# Addendum Instructions for Installing Block-Off Baffle on IHP Direct-Vent Gas Fireplaces

Applicable Models Listed Below\*


For more information, visit [IHP.US.com](http://IHP.US.com)

This addendum is in addition to the Installation and Operation Manuals provided with the models listed in **Table 1**. Use these instructions when installing the provided Block-Off Plate on **fireplaces that are rear vented horizontally ONLY. DO NOT USE this plate if any elbows or vertical pipe sections are installed.**

<i>Superior® Models</i>	<i>Astria® Models</i>
DRT3035 / DRT3535	Gemini 35 / Scorpio 35
DRC3035 / DRC3535	Gemini CD 35 / Scorpio CD 35
DRT3040 / DRT3540	Gemini 40 / Scorpio 40
DRC3040 / DRC3540	Gemini CD 40 / Scorpio CD 40
<i>Comfort Flame™ Models</i>	Gemini DLX 35
Aurora 35 / Aurora 40	Gemini DLX 40
Aurora CD35 / Aurora CD40	<i>Superior Mobile Home Models</i>
Madison 35 / Madison 40	MHD35 / MHD40


**\*Table 1 - Kit Used By Applicable Fireplace Models Listed Here**

**NOTE:** The block-off panel and the baffle panel in Figures 1-3 are shown unpainted for clarity. Panels on production unit are painted black.

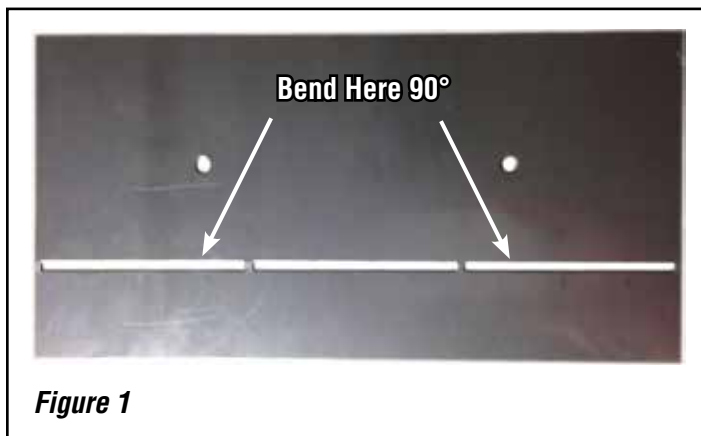

## INSTALLATION INSTRUCTIONS

1. Locate the supplied Baffle Block-Off Plate and bend 90° at location shown in **Figure 1**.
2. Locate and remove the (2) screws in the existing baffle located in the upper-rear interior of the fireplace (**Figure 2**).
3. Install the bent Baffle Block-off Plate as shown in **Figure 3** using the (2) screws removed in the previous step.
4. Follow instructions of Installation and Operation Manual provided with the fireplaces listed in **Table 1**.

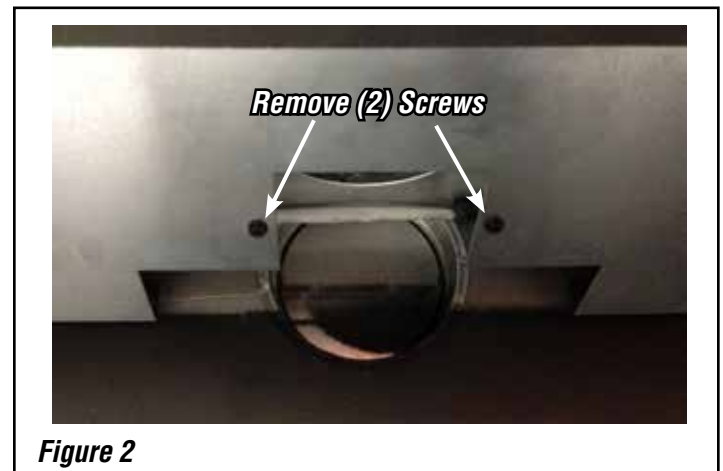

Innovative Hearth Products (IHP) reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.